

User manual *short version* Avara alarm system

A complete version can be found on www.avara.no



The Avara alarm has 3 alarm modes;

1	<p>Always-on The smoke, CO-gas and propane gas sensors are always active and cannot be turned off.</p> <p style="text-align: center;">No operation required!</p>
2	<p>Night alarm mode Turn the Night Alarm on if you want extra safety at night when you are sleeping in the motorhome/caravan. Alerts are given if break-in through <i>doors</i> and <i>hatches</i> equipped with <i>burglar detectors</i> are detected. Movement outside and along the walls sets off <i>flashing LED-lights</i> from the <i>external detectors</i>. If the movement on the outside does not stop after appr 30 sec, an alert signal is given inside from the main unit. You can move freely indoors without triggering the night alarm. Note that triggered alarms only give alerts in the <i>Main Unit</i>, not in the <i>siren</i>. (PS - Night alarm mode features does not apply to Avara Lite).</p> <p style="text-align: center;">Night alarm is turned on by pressing at the lower part of the Main Unit lid. Confirmed by Green blinking LED every 10 sec.</p>
3	<p>Burglar alarm mode Turns on if you leave the motorhome/caravan and want protection. An alerts is triggered by <i>burglar detectors</i> in doors and hatches, the <i>motion detector on the main unit</i> and the <i>G-sensor in the main unit</i> (detects if the entire vehicle is moved). There cannot be pets left inside the vehicle when the burglar alarm is on. Triggered alarm gives notification in the in-door <i>main unit</i>, the <i>siren</i> and sends notification to your mobile phone/e-mail (if online version).</p> <p>You turn on your burglar alarm as follows:</p> <ol style="list-style-type: none"> 1. Hold the <i>key fob</i> close to bottom of the <i>Main Unit (small sign)</i> 2. While holding the key fob in place, press the lower part of the lid (any place on the lower part) 3. Hold the key fob still for about 3 sec. until you get a confirmation beep <ul style="list-style-type: none"> - you can then remove the key fob and the alarm is on and <i>becomes active after 3 minutes</i>. <p style="text-align: center;">Confirmed by Red blinking LED every 10 sec and high-pitch "beep" while activating.</p>

"Hush" function

If you unintentionally trigger a smoke alarm during cooking, you can temporarily "hush" the alarm *while it is active by pressing the lower part of the main unit lid*. This will pause the alarm for 10 minutes after which it will automatically be active again.

Be aware if you see that *the battery indicator on the main unit lights up red*. This is a common indicator for *all devices and means that one detector either has weak batteries or that a detector is not communicating properly.*

See the complete version of the manual for solving this issue.

Remember to register your modem on www.avara.no to activate the functions you can access via mobile phone/lpad/etc and PC. If your alarm package does not have a modem, this can be purchased separately.

